

Hand crank for emergency operation

In the event of a power failure or technical malfunction, the umbrella can be operated by a hand crank. To do this, open the casing of the drive unit, remove the electrical connection and fix on the hand crank.

Crank clockwise to open the umbrella. Crank anticlockwise to close the umbrella. Pull off the hand crank after use and restore the electrical connection at the plug.

